PürTEK

Big Button Emergency Phone with Remote Pedant

PT3802

Thank you for purchasing your Remote Dialing/Answering Big Button Phone. Combining a speakerphone and a Caller ID unit in one system, your phone can display available call information. This telephone is hearing aid compatible.

What's Included

Telephone
Remote Pendant
7 feet Long Phone Cord
7 inch Short Phone Cord
Coiled Cord
AC Adapter
Wall Mounting Bracket
User's Guide

www.leiproducts.com

PT3802-OM-EN.indd 1 04/08/2008 11:53:15 AM

Contents

Important Safety Instructions **3**

Controls **4**

Preparing Your Phone **6**

Mounting the Phone **6**

Installing Batteries **7**
In the Phone 7
In the Pendant 7
Battery Notes 7

Setting Your Phone **8**
Setting the Remote Pendant 8

Making calls **9**

Caller ID **9**
Call Back from the Caller ID Memory 10
Saving Caller ID Numbers 10
Deleting Caller ID Records 10

Memory **10**
Storing Numbers in Memory Locations 10
Storing Numbers in the Phone Book 10
Deleting Numbers in the PhoneBook 11
Recording Name 11
Dialing a Memory Number 11
Recording a Message for Emergency Calls 12
Checking Your Emergency Message 12
Using the Emergency Call 12

Cautions **13**

Industry Canada Statement (CS03) **14**

Industry Canada Statement (RSS 210) **15**

Limited One-year Warranty **16**

PT3802-OM-EN.indd 2 04/08/2008 11:53:15 AM

Important Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightening.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

Save these instructions!

PT3802-OM-EN.indd 3 04/08/2008 11:53:15 AM

Controls

CALL BACK/OK
Press to confirm phone functions or automatically dial the selected caller ID record or phonebook number.

DELETE
To delete selected number/name/option.

SOS
Hold down to activate or deactivate emergency call.

MI & M2
Store 2 numbers and dial with one touch of a button.

UP/DOWN
Scroll up or down to select option.

MENU
To select options.

PHONE/CID
Switch between phone book and Caller ID when in standby mode.

FLASH
Press to produce a switchhook signal for special services or to disconnect the current call.

REDIAL/PAUSE
Press to view the last dialed number, press **REDIAL/ PAUSE** or **SPKPHONE** or pick up the handset to dial the number. When on a call, press to pause for about 4 seconds.

PT3802-OM-EN.indd 4 04/08/2008 11:53:16 AM

Controls

BOOSTER
LED lights when BOOSTER is activated. Adjust BOOSTER/VOLUME for the desired volume. Press BOOSTER again to deactivate. This function is for the handset only.

SPKPHONE
Press to switch between the handset and speakerphone, or to make, answer or end call.

RINGER LO MID HI
Set the ringer volume: LO/MID/HI.

TONE
Slide to adjust the tone volume for the handset when BOOSTER is activated.

VOLUME
Slide to adjust the speaker volume.

Hold down to activate or deactivate emergency call. LED lights when the red button is pressed.

You can also press the red button to answer or end a call in speakerphone mode.

PT3802-OM-EN.indd 5 04/08/2008 11:53:16 AM

Preparing Your Phone

1. Peel the plastic label from your phone's display before using your phone.
2. Connect the supplied AC adapter to the **DC 9 V 200 mA** jack and a standard AC outlet.

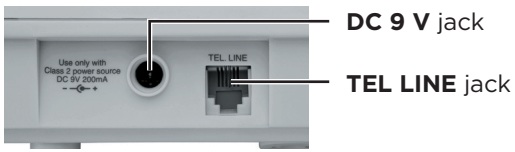

3. Plug one end of the supplied modular cord into the **TEL. LINE** jack (RJ11) on the back of the phone. Plug the other end into a modular phone line jack.
4. Plug one end of the supplied coiled cord into the jack on the left side of the phone. Plug the other end into the modular jack on the handset.

Mounting the Phone

You can place your phone on a flat surface or mount it on a telephone wall plate (not included). To mount it on the wall:

1. Connect one end of the short phone cord to the telephone wall plate and the other the telephone.
2. Insert the supplied mounting bracket into the slots on the back of the phone and push the bracket up until it clicks. To detach the bracket, press the tab and slide down the bracket.
3. Insert the two keyhole slots on the phone with the wall plate and slide the phone down, being careful not to pinch the telephone line.
4. Slide out the tab in the phone's cradle and rotate the tab 180 degrees. Then insert it back to hold the phone in the cradle.

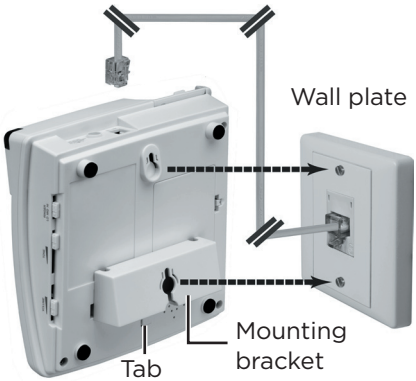

PT3802-OM-EN.indd 6 04/08/2008 11:53:16 AM

Installing Batteries

In the Phone

(Optional) Insert 4 AA alkaline batteries (not supplied) in the battery compartment with correct polarities. When appears or the display dims, replace the batteries.

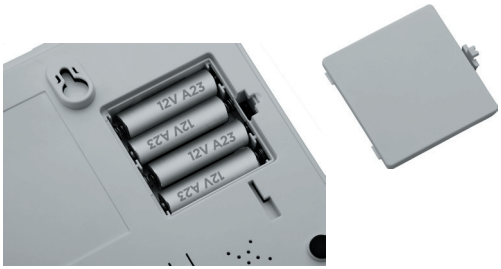

In the Pendant

Your pendant comes with one 12 V A23 battery, when the LED on the pendant dims, replace the battery.

Use a screwdriver to open the battery cover, insert a new battery with correct polarity, and replace the battery cover.

Battery Notes

- Replace batteries quickly to save records.
- Use only fresh batteries of the required size and recommended type.
- Do not mix batteries of different sizes or chemistries.
- Always remove old or weak batteries. Batteries can leak chemicals that can damage electronic parts.
- *The PT3802 Big Button Emergency Phone will work during a power failure. The 4 AA batteries (not included) will provide 30~40 hours of back up time.*

PT3802-OM-EN.indd 7 04/08/2008 11:53:17 AM

After your phone is powered on, system information appears in the display.

1. Press **MENU**. **LCD CONTRAST** appears in the display. Press **CALL BACK/OK** to display the current level, then press **UP/DOWN** to select one of five settings. Press **CALL BACK/OK** to confirm and go to time and date setting. **TIME/DATE** appears.
2. Press **CALL BACK/OK** to display the time, then press **UP/DOWN** to set the time, month and date. Press **CALL BACK/OK** to confirm. **LANGUAGE** appears.
3. Press **CALL BACK/OK** to display the current language, then press **UP/DOWN** to select the desired language. Press **CALL BACK/OK** to confirm and go to voice setting. **VOICE** appears.
4. Press **CALL BACK/OK** to display the language, then press **UP/DOWN** to select the desired language or **VOICE OFF**. Press **CALL BACK/OK** to confirm.
5. Repeatedly press **MENU** until **FLASH** appears, press **CALL BACK/OK** to display the current setting, then press **UP/DOWN** to select flash time. Press **CALL BACK/OK** to confirm and go to tone/pulse setting.
6. **TONE/PULSE** appears, press **CALL BACK/OK** to display the current setting, then press UP/DOWN to select tone or pulse 40/60 setting. Press **CALL BACK/OK** to confirm.

Notes:

- If you do not press a button within 20 seconds, the phone returns to the standby mode, or press **PHONE/CID** to return to standby mode.
- The default setting for voice is English, if you select other languages, the phone will announce the phone number, digits and phone/CID only.

Setting the Remote Pendant

The phone comes with one remote pendant for emergency, you can pair up to 5 pendants to your phone, **FULL** appears if you pair the 6th pendant. To pair the pendant to your phone:

1. Repeatedly press **MENU** until **REMOTE PENDANT** appears, press **CALL BACK/OK**, press **UP/DOWN** to pair (**PAIRING** appears) or cancel pairing (DELETE? appears) your pendant.

PT3802-OM-EN.indd 8 04/08/2008 11:53:17 AM

2. To pair your pendant to your phone, select **PAIRING**, press **CALL BACK/OK** on the phone, **PAIRING...** appears, press the red button on the pendant. If the pendant is successfully paired, **PAIRED** appears, if not, **PAIRING FAILURE** would appear.
3. To cancel, select **DELETE?** and press **CALL BACK/OK** to confirm.

Making calls

Press **SPKPHONE** to switch between the handset and speakerphone for convenient hands-free use. To end a call, press **SPKPHONE** again.
When on a call, press **SPKPHONE** to make or answer calls.

Caller ID

Your phone stores up to 64 Caller IDs. If you subscribe to Caller ID service, your phone displays the following call information:

- Caller's phone number - Your phone displays up to 14 digits. If the number is longer, the display shows only the last 14 digits.
- Time and date of the call.
- Caller's name (if you have this service).

If the Caller...	***Display Shows***
New number not previously displayed	**NEW**
Call more than once	**REPEAT**
Blocked number or name	**PRIVATE**
No information sent (International or PBX call)	**UNAVAILABLE**
Calling from long distance	**LONG DISTANCE**
Invalid or uncompleted Caller ID	**LINE ERROR**

Your phone stores the caller information. To see Caller ID records, repeatedly press **UP** or **DOWN**.

Note: The Caller ID's time and date can update the time on you phone.

PT3802-OM-EN.indd 9 04/08/2008 11:53:17 AM

Call Back from the Caller ID Memory

Press **PHONE/CID** repeatedly until **CLIP** appears, pick up the handset, press **UP** or **DOWN** to select the desired number, then press **CALL BACK/OK**.

Note: If the Caller ID number is 10 digits, press **CALL BACK/OK** once, 1 will added before the Caller ID number automatically. Press **UP** or **DOWN** to select or deselect adding 1. Press **CALL BACK/OK** again, the speakerphone turns on automatically and dials the displayed number.

Saving Caller ID Numbers

To save a Caller ID number, use **UP** or **DOWN** to find the desired number, then hold down **MENU** until **COPY TO MEMORY** appears. Press **CALL BACK/OK** to save the number, **SAVED** appears.

Deleting Caller ID Records

You cannot delete unviewed Caller ID records or during a call.

- To delete a single record, press **DELETE**. **DELETE?** appears. Hold down **DELETE** until the number disappears.
- To delete all records, hold down **DELETE** until **DELETE ALL?** appears. Then, hold down **DELETE** until **NO CALLS** appears.

Memory

You can store 2 direct memory locations and 30 phone numbers in the phone book.

Storing Numbers in Memory Locations

1. Repeatedly press **MENU** until **STORE NUMBER** appears.
2. Press **CALL BACK/OK**.
3. Enter the phone number you want to store, including 1+ area code for long distance numbers. Press **CALL BACK/OK**. Then press **M1** or **M2** to save.

Storing Numbers in the Phone Book

1. Repeatedly press **MENU** until **STORE NUMBER** appears.
2. Press **CALL BACK/OK**.
3. Enter the phone number you want to store, including 1+ area code for

PT3802-OM-EN.indd 10 04/08/2008 11:53:17 AM

long distance numbers. Press **CALL BACK/OK**. Then enter the name and press **CALL BACK/OK**. Press **UP** or **DOWN** to select **EMERGENCY ON/OFF**, press **CALL BACK/OK** again to save if select **OFF**. If you select **EMERGENCY ON**, press **UP** or **DOWN** to select a location, then press **CALL BACK/OK**.

4. The number and **NAME RECORDING** appears, hold down **CALL BACK/OK** and speak to the phone.
5. Repeat steps 3 ~ 4 to save the other numbers.

Note: To edit a name which has been saved, hold down **MENU** until **EDIT?** appears, then press **CALL BACK/OK** to confirm and re-enter the phone number.

Deleting Numbers in the PhoneBook

- To delete a single number, press **DELETE**, **DELETE?** appears, then hold down **DELETE** until the number disappears.
- To delete all numbers, hold down **DELETE** until **DELETE ALL?** appears. Then, hold down **DELETE** until **EMPTY** appears.

Recording Name

You can make recording for your phonebook. During an incoming call, your phone will announce the caller's name instead of the phone number.

1. Repeatedly press **MENU** until **NAME RECORDING** appears.
2. Press **CALL BACK/OK**, then press **UP** or **DOWN** to find the desired number.
3. Hold down **CALL BACK/OK** until you hear a beep and **VOICE** flashes and then speak into the microphone simultaneously. The maximum recording time is 3 seconds.
4. To delete the recording, press **DELETE** during playback.

Dialing a Memory Number

To dial a number stored in the direct memory location.

- Pick up the handset and press **M1** or M2.
- Press **M1** or **M2** and then pick up the handset, or press **SPKPHONE** or **CALL BACK/OK**.

PT3802-OM-EN.indd 11 04/08/2008 11:53:17 AM

To dial a number stored in the phonebook:

- Repeatedly press **PHONE/CID** until appears, then press **UP** or **DOWN** to find the number, press **CALL BACK/OK**.
- Pick up the phone, find the desired number and then press **CALL BACK/OK** to call the number.

Note: For quick search, enter the first letter of the name, then press **UP** or **DOWN** to find the desired number.

Recording a Message for Emergency Calls

1. Repeatedly press **MENU** until **RECORD MESSAGE** appears.
2. Hold down **CALL BACK/OK** until you hear a beep and **VOICE** flashes and then speak into the microphone simultaneously. The maximum recording time is 20 seconds.
3. Release **CALL BACK/OK** when finished recording. The phone then playbacks the message automatically.

Notes:

- When recording a message, remind your caller to press **0** to talk (maximum 3 minutes), and then also to press **1** and **2** if they want to cancel the SOS function.
- If the callers do not press **0**, they will only be able to listen to the message.

Checking Your Emergency Message

1. Repeatedly press **MENU** until **CHECK MESSAGE** appears.
2. Press **CALL BACK/OK** to hear the message.
3. To delete the recording, press **DELETE** during playback.

Using the Emergency Call

When programming emergency numbers and (or) making test calls:

- Remain on the line and briefly explain to the dispatcher the reason for the call.
- Perform such activities in the off-peak hours, such as early morning or late evenings.

PT3802-OM-EN.indd 12 04/08/2008 11:53:18 AM

CAUTIONS

- To ensure proper operation, this equipment must be installed according to the enclosed installation instructions. To verify that the equipment is operating properly and can successfully report an alarm, this equipment must be tested immediately after installation, and periodically thereafter, according to the enclosed test instructions.
- This equipment cannot report an alarm when other equipment (telephone, answering system, computer modem, etc.) is connected to the same phone line is in use.

1. Pair your pendant to your phone. (See Setting the Remote Pendant)
2. Save phone numbers with EMERGENCY ON. (See Storing Numbers in the PhoneBook).
3. Hold down the red pendant button or SOS. The phone beeps for about 15 seconds then dials the first emergency number automatically. The phone will announce your recording.

Notes:

- If there is no response from the 1st emergency call, or if the 1st caller does not press 1 and 2, the phone will dial the next number.
- If you do not record a message, the phone will announce the default emergency message when you press SOS or the pendant.
- If the emergency calls receive no response, the phone automatically redials the numbers 10 minutes later.
- The maximum operating range of the pendant is about 100 feet.
- The PT3802 Big Button Emergency Phone will work during a power failure. The 4 AA batteries (not included) will provide 30~40 hours of back up time.

PT3802-OM-EN.indd 13 04/08/2008 11:53:18 AM

Industry Canada Statement

INDUSTRY CANADA CS03 STATEMENT

This product meets the applicable Industry Canada technical specifications. This is confirmed by the registration number. The abbreviation, IC before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connections. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user of this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

WARNING! Users should not attempt to make such connections themselves but should contact the appropriate electric inspection authority, or an electrician, as appropriate.

CAUTION: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5. An alternative indication of the REN is the Load Number (LN); this number should be divided by 20 to approximate the equivalent REN. The REN Number of this unit is indicated on the bottom of your telephone.

PT3802-OM-EN.indd 14 04/08/2008 11:53:18 AM

Industry Canada Statement

INDUSTRY CANADA RSS 210 NOTICE: CLASS B LIMITS WITH INTERFERENCE STATEMENT

This equipment complies with the limits of a Class B digital device as specified in Industry Canada Regulations. These limits provide reasonable protection against radio and TV interference in residential areas. However, this device might cause radio or TV interference even when it is operating properly.

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference including interference that may cause undesired operation of the device.

To eliminate the interference, you can try one or more of the following:

- Reorient or relocate the receiving antenna.
- Move your device away from the receiver.
- Connect your device to an outlet that is on a different electrical circuit from the receiver.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus.

PT3802-OM-EN.indd 15 04/08/2008 11:53:18 AM

Warranty

LEI ELECTRONICS INC. LIMITED WARRANTY

LEI Electronics Inc warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. Within this period, simply take the product and your proof of purchase to place of purchase and the product will be repaired without charge for parts and labour. LEI Electronics Inc reserves the right to charge for transportation. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, province and other governmental entities in which LEI Electronics Inc operates. This warranty is subject to all statutory rights you may have in the country of purchase.

For product support please contact
www.leiproducts.com or 1-800-449-3315.

Custom Manufactured in China for

LEI Electronics Inc,
Barrie, Ontario, Canada L4N 8Y1

Limited Warranty/Garantie Limitée
U.S.A & Canada
LEI Electronics Inc. All Rights Reserved.

PT3802-OM-EN.indd 16 04/08/2008 11:53:18 AM